BACK COUNTRY®

**7006**

**NISSAN PATHFINDER**

***ENGINEERED STEP TUBES***

# Installation Instructions

**CONTENTS:**

(8) 5/16-18 x 1-1/4" HEX BOLT
(24) 5/16" FLAT WASHER
(16) 5/16" LOCK WASHER
(8) 5/16" HEX NUT
(12) H-076 M8 HEX BOLT
(2) H-399 REAR BRACKET
(1) H-400 FRONT LEFT BRACKET
(1) H-401 FRONT RIGHT BRACKET

1. Driver side front, Install the supplied M8-1.25 x 30mm bolts through a lock washer, flat washer, mounting bracket and into the factory tapped holes on the body panel and onder the frame. Snug by hand.

2. Driver side rear, Repaeat the same process for the rear bracket. Snug by hand only.

3. Bolt the tube to the mounting brackets with two 5/16-18 hex bolts, lock washers, flat washers and 5/16-18 hex nuts. Snug the bolts, then check the alignment of the tube against the rocker panel.

4. Make any necessary adjustments, then tighten M8 and 5/16-18 fasteners to 12 ft lbs. each.

5. Repeat steps on opposite side of vehicle.

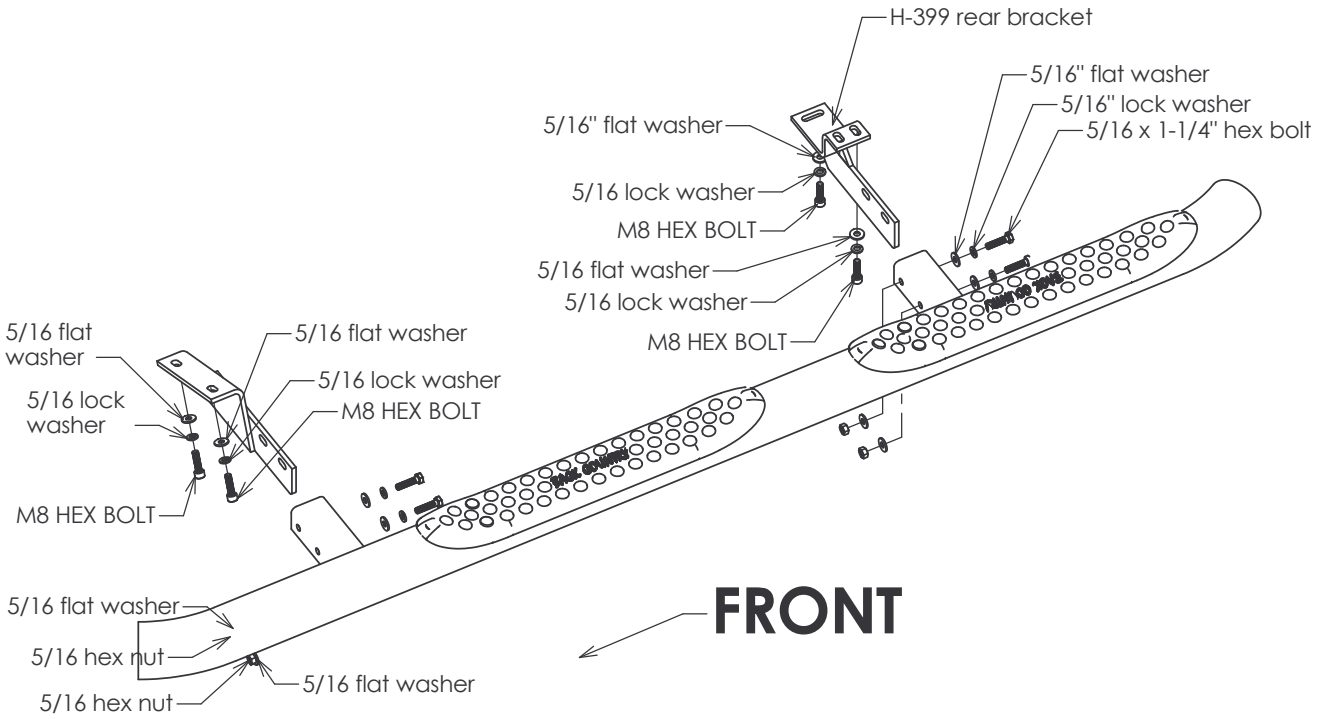




Back Country, Tekstyle and Teksport are Registered Trademarks of Design Automotive Group, Inc. All rights reserved